



ULTRAN POLITUR
P - 01 for interior



ULTRAN POLITUR
P - 03 UV for exterior

APPLICATION PROCEDURE
ULTRAN POLITUR P - 01 for interior



Kamper Wood

WF - 115
Kamper

Kuas I/ 1st Coat
P - 01 Teak

Kuas I/ 2nd Coat
P - 01 Teak

Top Coat :
P - 01 Clear Gloss

Top Coat :
P - 01 Clear Dof

ULTRAN POLITUR P - 03 UV for exterior



Kamper Wood

Kuas I/ 1st Coat
P - 03 UV Teak

Kuas II/ 2nd Coat
P - 03 UV Teak

Kuas III/ 3rd Coat
P - 03 UV Teak

* For better weathering resistance, it's recommended to use Ultrane Penetran UPT-851

COLORS OF ULTRAN POLITUR P - 01
TRANSPARENT COLORS



P - 01 Solar Yellow



P - 01 Solar Red



P - 01 Mahony



P - 01 Brown KJ




P - 01 Brown AR


COLORS OF ULTRAN POLITUR P - 03 UV
TRANSPARENT COLORS



P - 03 UV Solar Yellow

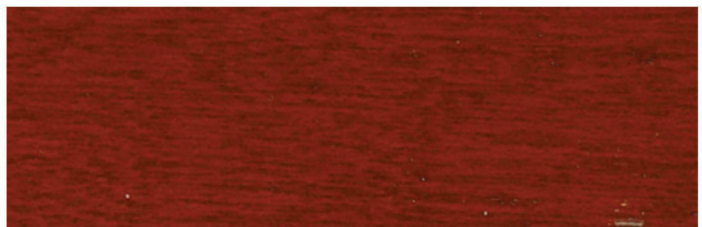

P - 03 UV Solar Red

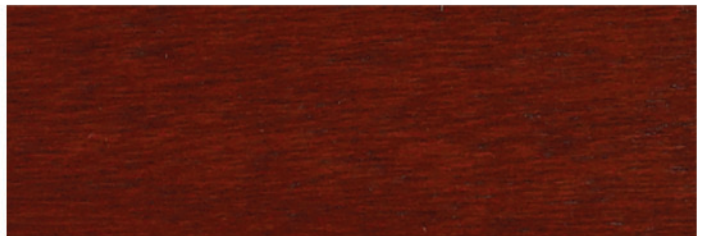


P - 03 UV Mahony




P - 03 UV Brown KJ




P - 03 UV Brown AR

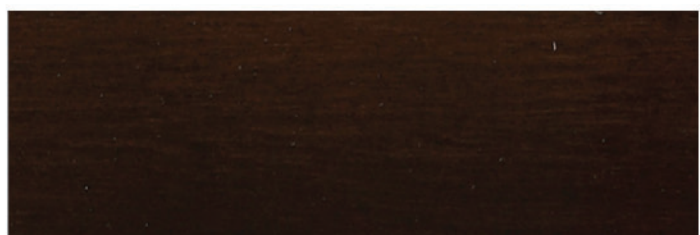


P - 01 SHP Brown

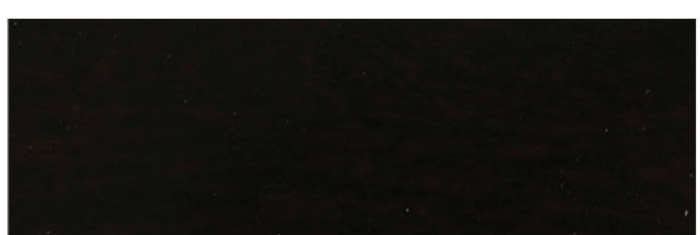

P - 01 Dark Brown

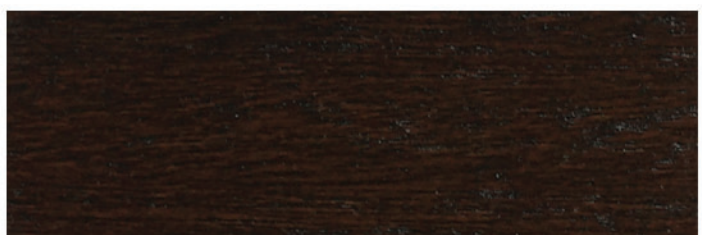


P - 01 SHP Brown

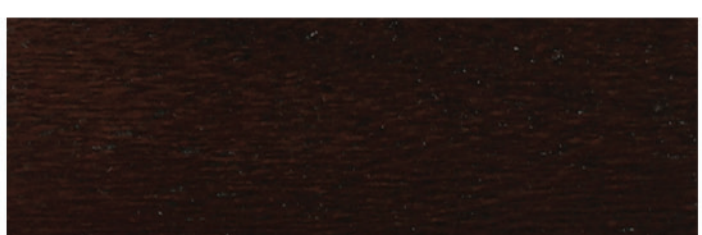

P - 03 UV Dark Brown

APPLICATION ON TEAK WOOD

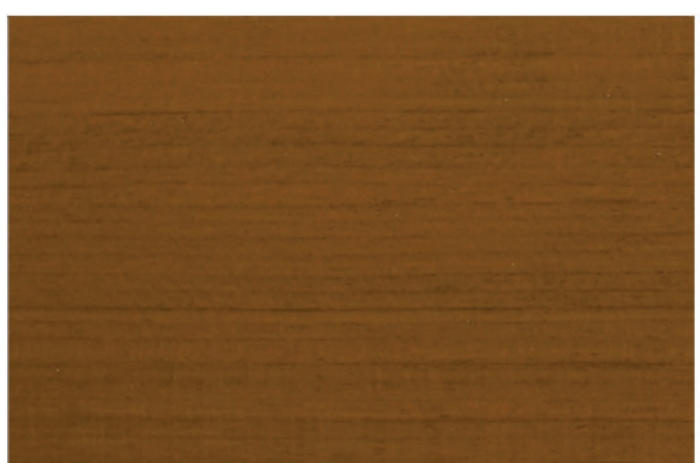


Application procedure :

1. Teak Wood
2. Wood Filler WF - 115 Kamper
3. Ultrane Politur P - 01 Solar Yellow (by brush)
4. Ultrane Politur P - 01 Solar Yellow (by spray)
5. Ultrane Politur P - 01 Clear Gloss (by spray)

NATURAL



P - 03 UV Natural Gloss

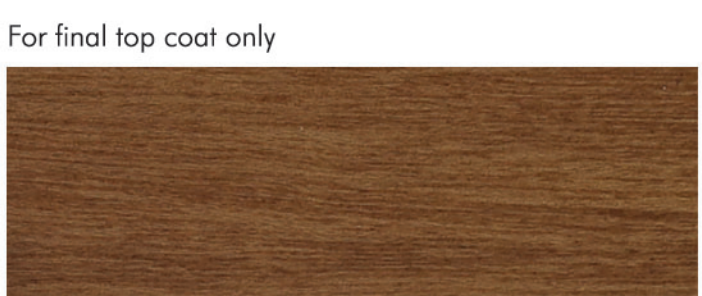

P - 03 UV Natural Dof

APPLICATION ON SUNGKAI WOOD



Application procedure :

1. Sungkai Wood
2. Wood Filler WF - 115 Kamper
3. Ultrane Politur P - 01 Teak (by brush)
4. Ultrane Politur P - 01 Teak (by spray)
5. Ultrane Politur P - 01 Clear Gloss (by spray)

OXIDE COLORS




P - 03 UV Maize



P - 03 UV Tropical Teak



P - 03 UV Padouk

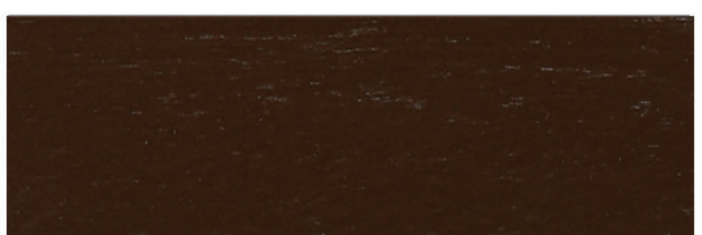

P - 03 UV Red Wood



P - 03 UV Walnut



- Warna-warna ini dibuat mendekati aslinya
- The colors on this card are as to actual paint colors